

NY Thermal Inc. Tel: (506) 657-6000 Toll Free: 1-800-688-2575 Fax: 1-506-432-1135 Web: www.nythermal.com Email: info@nythermal.com

84921 **Retaining Clip, Combi Block Inlet/Outlet** (59200188)

Applicable Boiler Models

Tx151C

Kit Contents

1 Retaining Clip

Tools Required

• ¹/₄" Nut Driver

Replacement Instructions

- 1) Turn off power and gas to the boiler.
- 2) Drain boiler of water.
- 3) Remove clip by rotating counter clockwise until it snaps out of place.
- 4) Replace clip by fitting it into place, pushing, and then rotating clockwise until it "clicks" into place.

Note: Clip will only fit one way. (See figures on the right)

Refill boiler with water and purge excess air. 5)

Air in Boiler - Ensure the CAUTION boiler is completely filled with water to a minumum of 15psi, and that all the air is purged. Failure to do so could result in a boiler malfunction causing property damage.

Left clip shown in the locked position, TAB pulled toward the front of the boiler.

> Right clip shown in locked position, TAB pushed toward the back of the boiler.