
Assembly instructions

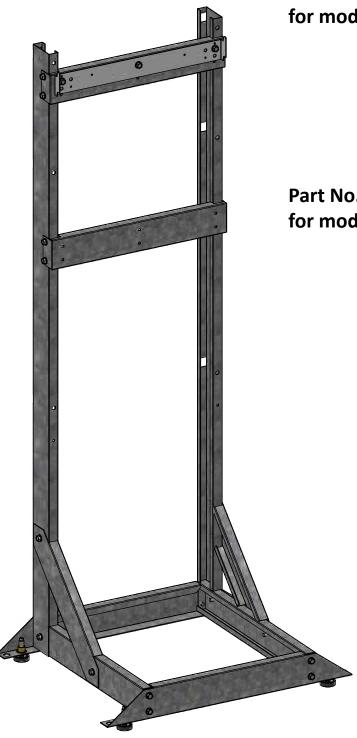

Part No. 86998

for models — TRX085 – 199C

FTVN085 - 199C

S20W

TFTN085 - 285

Tft60 - 285*

* S/N 153063 and later. Will not fit earlier units.

Part No. 86999

for models — TFNT340 – 399

Tft340 - 399**


** S/N 2109222038**157799** and later.


Will not fit earlier units.

- Easy to assemble only two tools required: (1/4" & 3/8" nut drivers)
- Sturdy 16 ga galvanized steel construction
- Positions boiler at ideal height for installation and service
- Anti-topple mounting hardware included




BEFORE ASSEMBLY — Verify contents:

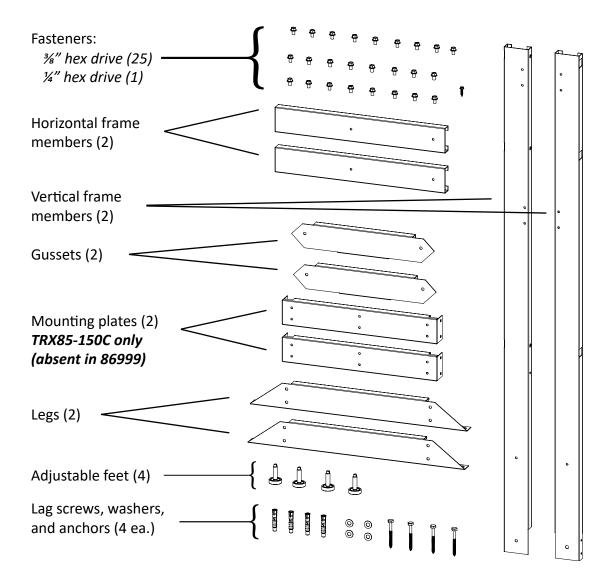

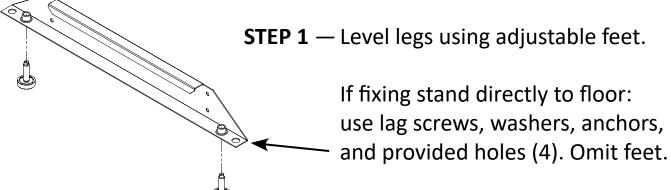


STEP 2 — Assemble left and right frame segments.

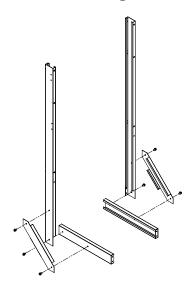


STEP 4 — TRX150, 199, 199C FTVN085 – 199C TFTN085 – 285 Tft60 – 285 & S20W

Lay boiler and completed floor stand on their sides and fasten stand to boiler <u>using holes in centre of rails.</u> **STEP 3** — Fasten legs to frame.

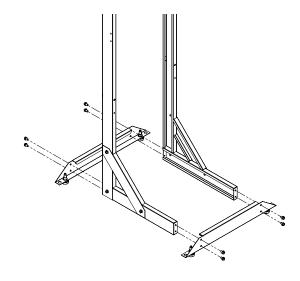


STEP 4 — TFTN340 – 399 Tft340 – 399


Lay boiler and completed floor stand on their sides and fasten stand to boiler <u>using holes</u> outboard of rails.

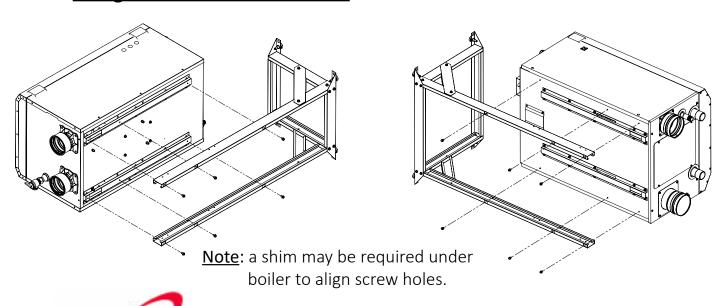



STEP 4 — TRX085, 110C, 120, 150C


- a. Fasten mounting plates to completed floor stand.
- b. Fasten wall bracket (p/n 86938; located inside the boiler box) to upper mounting plate.
- c. Hang boiler on wall bracket.
- d. Secure boiler with single screw through *lower* mounting plate.

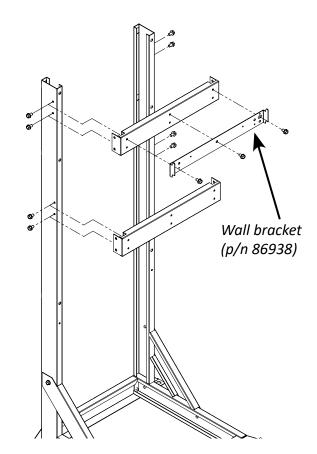

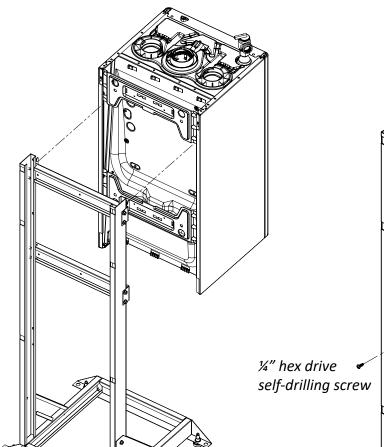

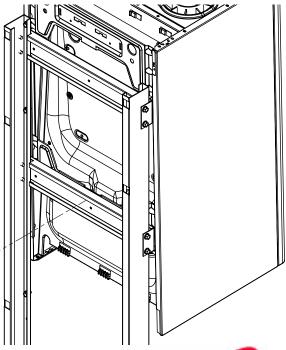

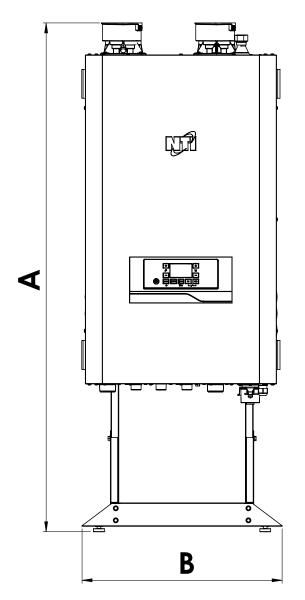

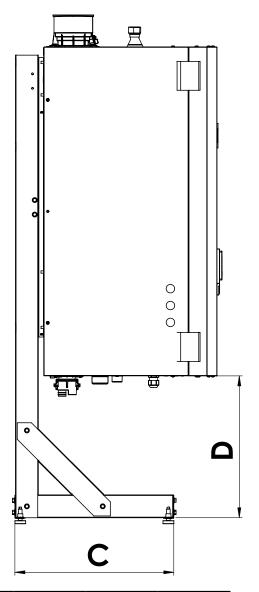

	Dimensions (inches)			
Model	Α	В	С	D
Tft60-110	53-7/8	20-3/4	16-1/2	15-5/8
Tft154	53-7/8	20-3/4	16-1/2	14-7/8
Tft201-285	52-5/8	20-3/4	16-1/2	14-7/8
Tft340-399	55-3/4	28-7/8	19-3/4	14-1/2
TRX085, TRX120, TRX110C and TRX150C	53-5/8	20-3/4	16-1/2	22-5/8
TRX150 and TRX199(C)				
FTVN085-199(C)	52-7/8	20-3/4	16-1/2	14-7/8
TFTN085-285				
TFTN340-399	57	28-7/8	19-3/4	14-1/2

