Assembly instructions



Part No. 86998 for models — TRX085 – 199C FTVN085 – 199C S20W TFTN085 – 285 Tft60 – 285* * s/N

* S/N 153063 and later. Will not fit earlier units.

Part No. 86999 for models — TFNT340 – 399 Tft340 – 399**

** S/N 2109222038**157799** and later. Will not fit earlier units.

- Easy to assemble only two tools required: (¼" & ¾" nut drivers)
- Sturdy 16 ga galvanized steel construction
- Positions boiler at ideal height for installation and service
- Anti-topple mounting hardware included

<u>BEFORE ASSEMBLY</u> — Verify contents:



STEP 2 — Assemble left and right frame segments.



STEP 4 — TRX150, 199, 199C FTVN085 – 199C TFTN085 – 285 Tft60 – 285 & S20W

Lay boiler and completed floor stand on their sides and fasten stand to boiler <u>using holes in centre of rails.</u>





STEP 4 — TFTN340 – 399 Tft340 – 399

Lay boiler and completed floor stand on their sides and fasten stand to boiler <u>using holes</u> <u>outboard of rails.</u>





Floor Stand – Assembly instructions

STEP 4 — TRX085, 110C, 120, 150C

- a. Fasten mounting plates to completed floor stand.
- b. Fasten wall bracket (*p/n 86938; located inside the boiler box*) to *upper* mounting plate.
- c. Hang boiler on wall bracket.
- d. Secure boiler with single screw through *lower* mounting plate.





Floor Stand – Dimensions





		Dimensions (inches)			
Model	Α	В	С	D	
Tft60-110	53-7/8	20-3/4	16-1/2	15-5/8	
Tft154	53-7/8	20-3/4	16-1/2	14-7/8	
Tft201-285	52-5/8	20-3/4	16-1/2	14-7/8	
Tft340-399	55-3/4	28-7/8	19-3/4	14-1/2	
TRX085, TRX120, TRX110C and TRX150C	53-5/8	20-3/4	16-1/2	22-5/8	
TRX150 and TRX199(C)		20-3/4	16-1/2	14-7/8	
FTVN085-199(C)	52-7/8				
TFTN085-285					
TFTN340-399	57	28-7/8	19-3/4	14-1/2	

