

NY Thermal Inc Tel: (506) 657-6000 Toll Free: 1-800-688-2575 Fax: 1-506-432-1135 Web: www.nythermal.com Email: info@nythermal.com

Revision Date: Aug-12-2020 **Grundfos Inlet/Pressure Sensor, RPS4**

Applicable Boiler Models:

- Tx All Models
- Vmax All Models

Kit Contents:

- 1 x Grundfos Inlet/Pressure Sensor with Sleeve
- 1 x Retaining Clip •

Tools Required:

¹/₄" Nut Driver or Wrench

Replacement Instructions:

- Turn off gas and power to boiler. •
- Drain boiler of water.
- Remove retaining screw and swing control panel out of the way.
- To remove sensor press firmly and remove retaining clip and then • pull out sensor.

NOTICE

Ensure old O-ring is removed prior to installing new sensor.

84745

The pressure sensor is equipped with a rubber boot with integral O-ring. Prior to installing the new sensor remove the rubber boot and wet the sensor probe and rubber boot with water.

NOTICE

Inlet sensor can only be installed one way, do not force into position.

- Refill boiler with water and purge excess air.
- Check for leaks.





84745 Grundfos Inlet/Pressure Sensor, RPS4

S:\NTI2001_N_Drive (1-20-09)\R&D\PARTS - ENGINEERING\Parts Department Stickers and Instructions\Engineering Only\WEB PAGE DOCUMENTS\Current Parts Instructions (doc and pdf)\Parts Instructions Word Docs\84745CI.doc